


## EMP Basket Filter Bag Change / Clean Easy Steps (typical)

### WHEN AND HOW TO CHANGE / CLEAN BASKET FILTER EBF 8-24 (B04-13-013)

The filter housing has two gauges that indicate the amount of pressure across the filter bag. The reading of the gauges must be identical. Any pressure differed between the two gauges indicated that the filter bag is clogged and needs to be replaced or cleaned.

#### TO CHANGE BASKET FILTER BAG:

- ① Open **BYPASS** valve.
- ② Close both **INLET** and then **OUTLET** valves.
- ③ Release pressure by opening drain valve, pressure on gauges needs to read 0 before opening cover
- ④ Unscrew lid's T-Bolt completely and remove lid. Take care not to lose O-Ring Seal.
- ⑤ Remove used basket filter bag and install a clean or new one
- ⑥ Reinstall Lid. Tighten T-Bolt and check that lid is sealed properly.
- ⑦ Reopen **OUTLET** and then **INLET** valves.
- ⑧ Close **BYPASS** valve.

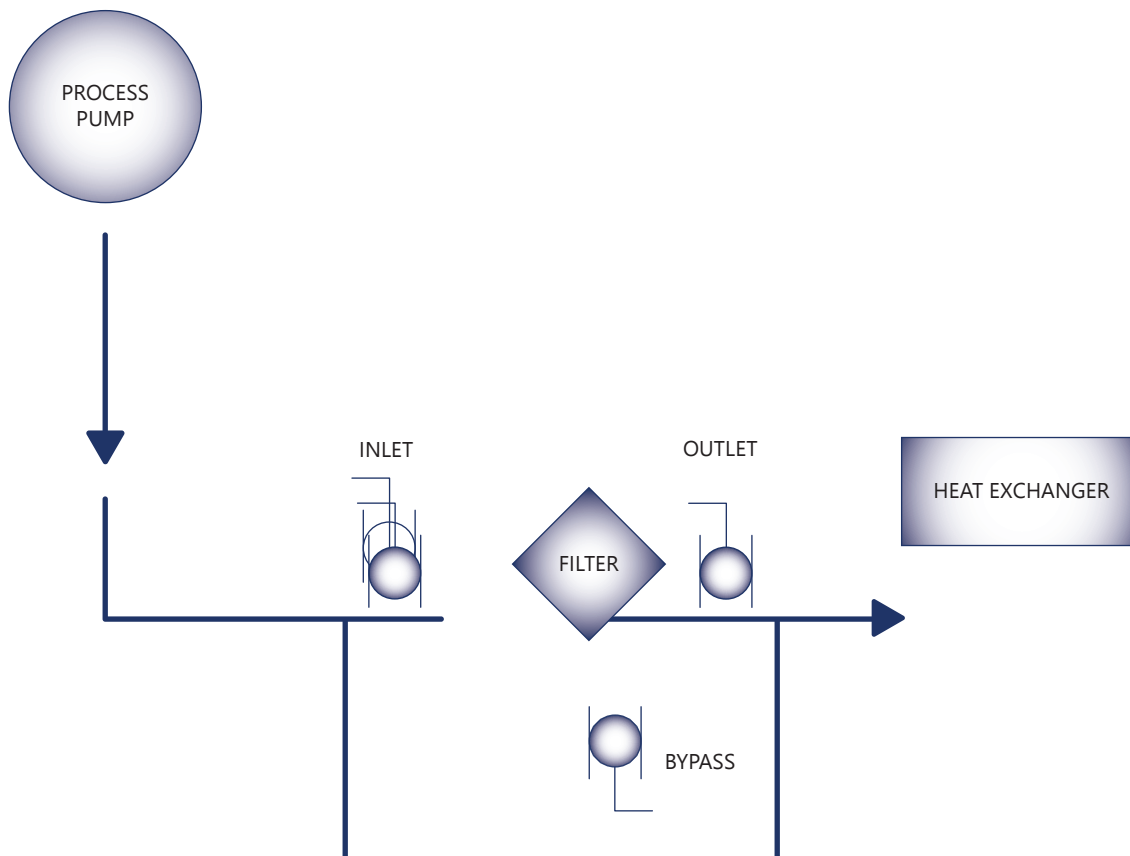

**Note:** when recirculation pump is running, water **MUST** always keep a free path to circulate.

**Note:** Procedure to clean bag depends heavily on the kind of impurities brought in by material processed.