

PARTS FOR EVL

EMP CODE	DESCRIPTION
B01-06-081	BEARING FOR TRSE PUMP
B01-32-004	WAVE WASHER FOR EVL300,500,750
B01-32-004	WAVE WASHER FOR EVL300,500,750
B01-32-005	SET NUT FOR EVL300,500,750
B01-32-006	BEARING FOR EVL300,500,750
B01-32-007	BEARING WASHER FOR EVL300,500,750
B01-32-008	OIL SEAL FOR EVL 300,500,750
B01-32-010	LEFT MECHANICAL SEAL for EVL 750 SAME AS B02-27-046
B01-32-011	MECHANICAL SEAL SPRING SET, FOR EVL300,500,750
B01-32-013	SET NUT FOR EVL 300,500,750
B01-32-014	IMPELLER FOR EVL300
B01-32-017	RIGHT MECHANICAL SEAL for EVL 750 SAME AS B02-27-046
B01-32-018	JUMP RING FOR EVL300,500,750
B01-32-019	FRONT BEARING COVER
B01-32-020	CIRCLIP FOR HOLE FOR EVL300,500,750
B01-32-021	BACK BEARING COVER FOR EVL300,500,750
B01-32-022	INSIDE HEXAGONAL BOLT FOR EVL300,500,750
B01-32-023	SPRING WASHER FOR EVL300,500,750
B01-32-024	BACK BEARING SET FOR EVL300,500,750
B01-32-025	FLANGE COVER FOR EVL300,500,750
B01-32-026	OUTSIDE HEXAGONAL BOLT FOR EVL300,500,750
B01-32-027	HEXAGONAL NUT FOR EVL300,500,750
B01-32-029	FLAT KEY FOR EVL300
B01-32-030	PAPER WASHER F/PUMP CASNG FOR EVL300,500,750
B01-32-033	FLAT KEY KEYWAY REF EVL 300-500-750
B01-32-034	FRONT BEARING COVER SET FOR EVL300 500 750
B01-32-035	HEX NUT FOR EVL 300
B01-32-036	SPRING WASHER FOR EVL300,500,750
B01-32-037	FLAT WASHER FOR EVL300,500,750
B01-32-038	PLUG FOR EVL300,500,750
B01-32-039	PLUG FOR EVL300,500,750
B02-31-074	GASKET KIT FOR PUMP TRSE/ EVL

PUMPS LANTERNS

EMP CODE	DESCRIPTION
B01-13-204	VACUUM PUMP FLANGE LANTERN EVL
B02-27-007	VACUUM PUMP FLANGE LANTERN GROUP